POTOMAC

STAR SERIES

POTOMAC
COMPUTER GAMES DIVISION

WORLD HEADQUARTERS: 16910 Dallas Parkway, Dallas, Texas 75248 (214) 233-8318
OVERSEAS: Kioicho Tbr. Bldg., No 7, 5-Chrome, Kojimachi, Chiyoda-ku, Tokyo, Japan (03) 230-2170
WORLD TELEX: 792979

© POTOMAC 1981

POTOMAC

STAR FIGHTER

The war has begun. The ALIENS are attacking the planet Earth. EVIL-EYE will distract them and divide when wounded. The hideous ALIENS are testing our weaponry systems. ATOMIC-PILES with their punishing attacks will surely destroy us. Wave after wave they increase their invasion. Earth's only weapon capable of success is the STAR FIGHTER MULTI-FIRE rocket.

SCORE

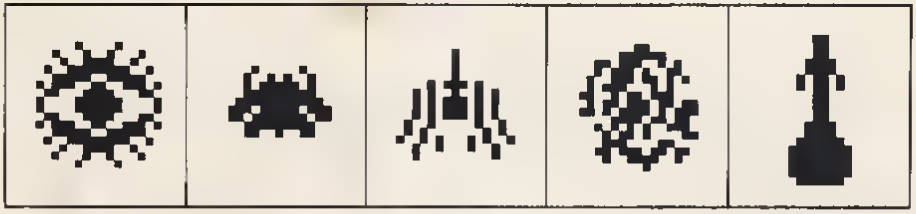

50 Points	30 Points	60 Points	200 Points	100 Points

PLAYING RULES

- ★ The game may be played by 1 or 2 people
- ★ Insert coin.
- ★ Select 1 or 2 player button.
- ★ Shoot down the attacking enemy by pushing the firing button, slide the ROCKET to the right or left by moving the control lever.
- ★ Extra ROCKETS (No. 1, 2, 3) will be awarded if the score gained exceeds the pre-set points.
- ★ The game is over when all ROCKETS have been destroyed.
- ★ You can leave your name (5 highest scores) on the screen to register your success (MIN.5000 pts.) against the invading aliens.

Docking

- ★ The object of the mission is to succeed in docking the first stage ROCKET with the 2nd and 3rd stage.
- ★ The highest score is obtained by completing the docking operation in the shortest time.
- ★ When the docking is successfully completed a high rate of fire will produce a high score.

If you complete 2 or 3 stage docking successfully, you will have MULTI-FIRE power.

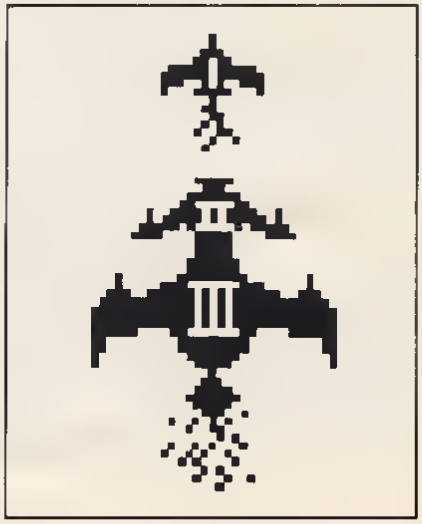

Three stage ROCKET

Printed in U.S.A.